



**CAUTION!**

*Only qualified technicians should attempt to service or maintain this equipment.*

If you experience any problems during the installation process, please call Follett Technical Service toll-free at (877) 612-5086 or +1 (610) 252-7301 for assistance.

## Installation

### MOV Installation


1. Locate 2 retaining clips on back of facade.



2. Loosen top 2 screws holding retaining clips.
3. Swing retaining clips down so facade can be removed.




4. Disconnect all connectors on back of facade.
- DO NOT remove ground wire at facade, remove ground screw on side instead.

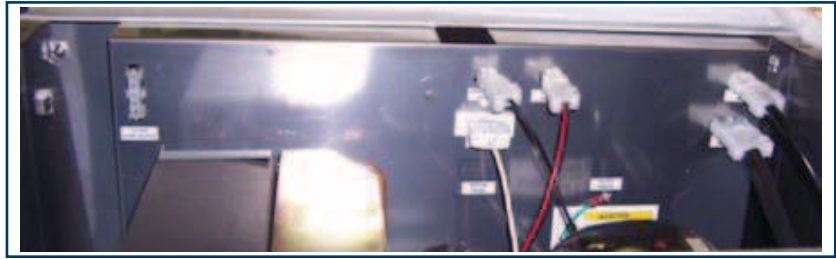


5. Grasp the sides of the facade and pull forward to remove.
- Facade will pop out of bayonet tabs.




6. With facade removed and placed face down, remove 4 screws to gain access

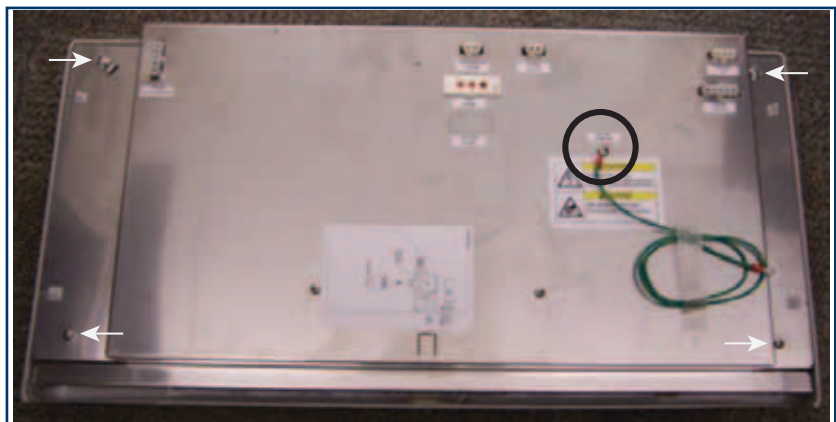


7. Flip cover to gain access to board and facade components.

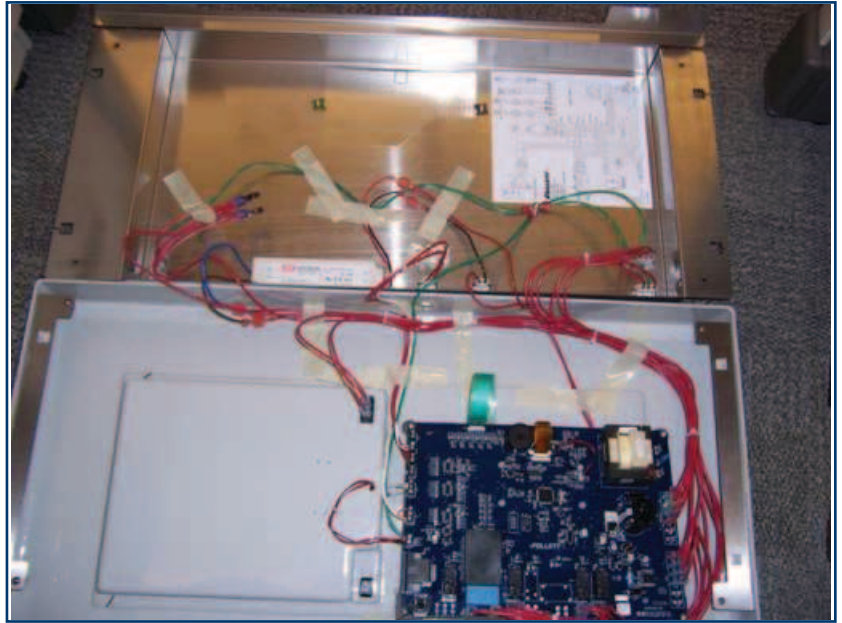

8. Disconnect spade terminal connectors at incoming line-side connections to the LED power supply (blue and brown wire).

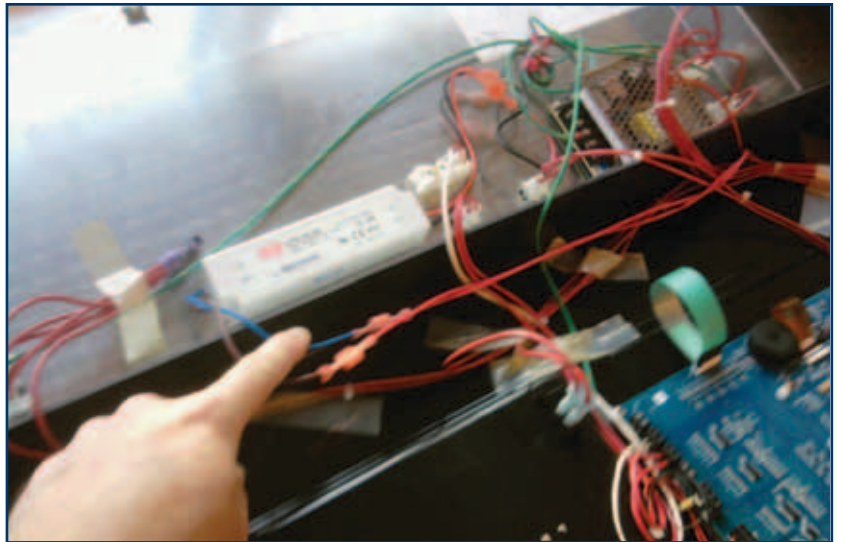

9. Install supplied MOV.

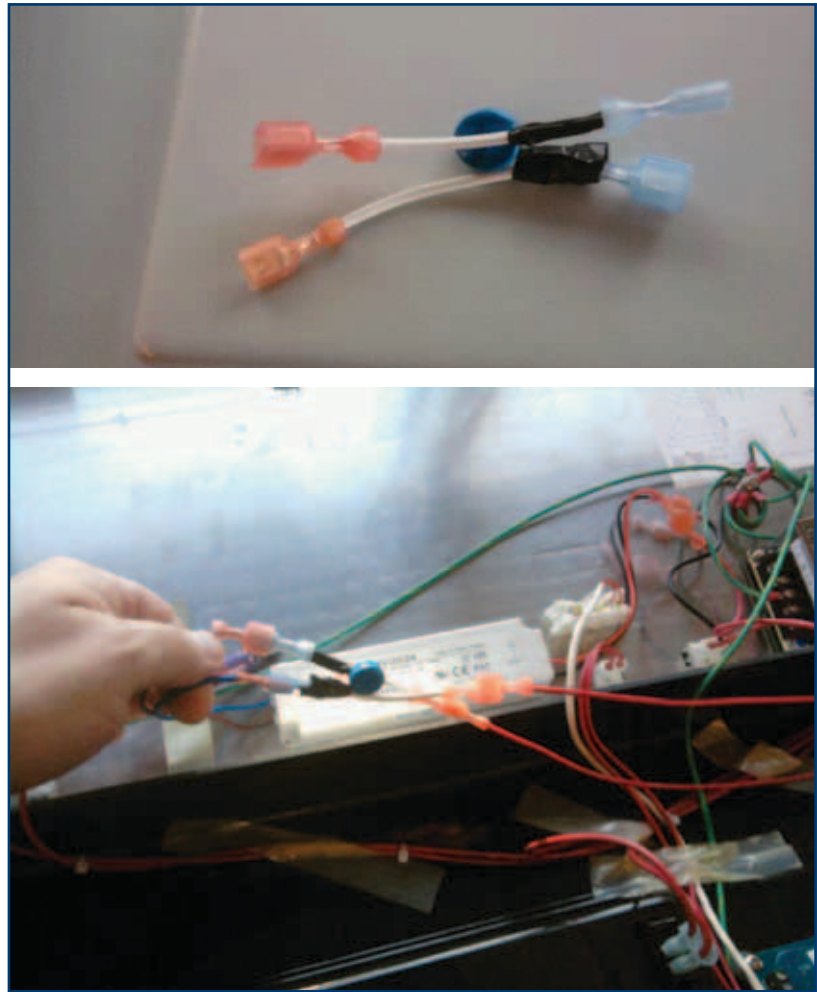

10. Reassemble facade and reinstall.

## LED Replacement


1. Loosen the 4 screws on the back of the top air return panel.




2. Remove the 2 Phillips head screws on the front of the top panel and remove.



3. Remove the 2 wiring connectors..

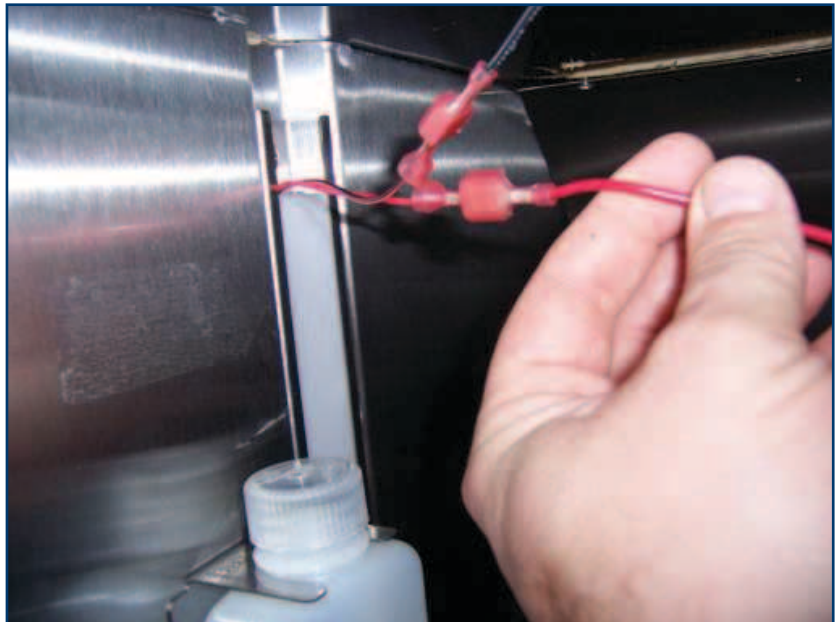

4. Loosen the top Phillips screw.
5. Slide up and hold the light diffuser.
6. Loosen the bottom Phillips screw.
7. Slide the entire LED carrier assembly up and off of the slotted openings and remove.

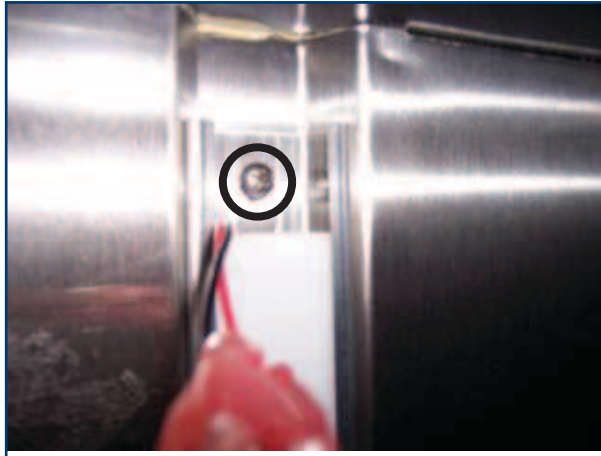

8. Slide diffuser out of LED carrier track.



9. Remove LED strip and install new LED strip and install diffuser into carrier track with new LED strip.
10. Reinstall LED carrier assembly in reverse order of removal.



Follett is a registered trademark of Follett Corporation, registered in US.



801 Church Lane • Easton, PA 18040, USA  
Toll free (877) 612-5086 • +1 (610) 252-7301  
[www.follettice.com](http://www.follettice.com)

01049691R00  
11/13