

Technical Bulletin

Horizon Icemaker Shutdown Procedure

To shut down an icemaker for an extended period of time, Follett recommends the following steps:

- Remove the front cover
- Press the CLEAN button – the MAINT/CLEAN light turns on and the machine will drain
- Wait for the LOW WATER light turn on
- Remove the cover from the cleaning cup and fill with hot water (approximately 3 quarts) until you see the CLEANER FULL light turn on
- Replace the lid on the cleaning cup
- Turn the water supply off
- Allow the machine to run a cleaning cycle, melting the ice in the evaporator – approximately 15 minutes
- The machine will drain its water and the LOW WATER light will come on
- Reinstall the front cover
- Turn off the machine

Prior to returning the machine to service, clean/sanitize the machine using SafeCLEAN Plus and replace water filters as needed.

Note: To go a step further, use SafeCLEAN Plus to clean/sanitize your machine ***PRIOR*** to shut down!

If you have any questions, please call Follett technical support at (877) 612-5086.