

Installation Instructions

Tools required

- #2 Phillips screwdriver
- 3/8" Wrench

Parts per Drawer

- (1) Drawer
- (4) Acorn nut
- (8) Rollers
- (4) Philips head screws 10-32
- (4) Flat head Philips head screws
- (2) Drawer slides
- (4) Spacer
- (1) Straight kickplate (per kit)

Installation

Before beginning installation

Follett's REF/FZR drawer kit may be used **ONLY** with REFs or FZR's equipped with a STRAIGHT bottom kickplate (Fig. 1).

If your REFs or FZR's have recessed kickplates (Fig. 2), replace them with the straight kickplates included with this kit.

Installing levelers

1. Remove levelers from plastic bag packed inside unit.
2. Tip refrigerator back and screw levelers (**Fig. 3**) in all the way to stop (they will extend 1/8" below base).
3. Adjust levelers as needed to level unit in both directions. To access levelers, remove the lower front panel. Turn levelers clockwise to extend levelers.

Fig. 1

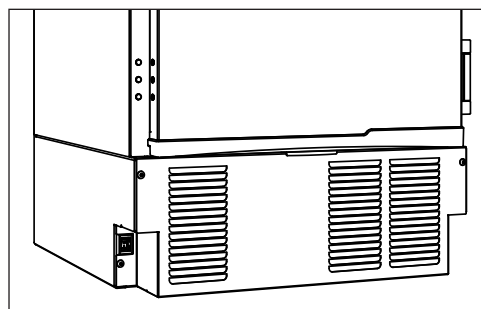


Fig. 2


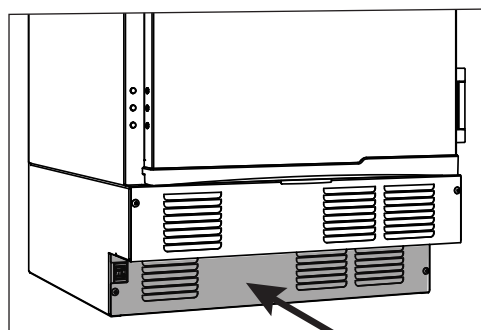


Fig. 3



Installing Drawer

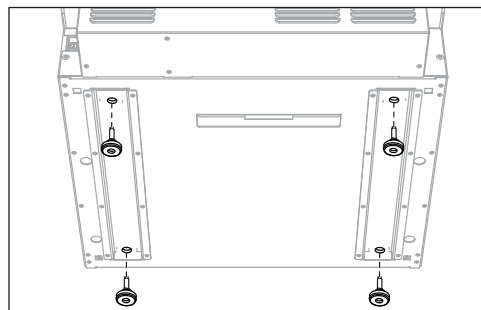

CAUTION!

- Do not use casters on units with drawers. Personal injury or damage to unit could result.

1. Remove drawer packed as an accessory.
2. Install the two rollers to the threaded holes on each side of the inside of the cabinet.
3. Hang one drawer slide on the each side of the cabinet by holding the slide parallel to the bottom of the cabinet, tipping the slide at a 45 degree angle, and pushing the slide over the two rollers.
4. Once the drawer slides are installed, slide the two rear rollers of the drawer into the slots on the top of the lower channel of the slides. Tip up the front of the drawer and slide the back until the front drawer roller lines up to slot. Drop the front drawer roller into the channel and push the drawer all the way in the cabinet.
5. Test operation of the drawer by sliding the drawer all the way out, then back in.

