
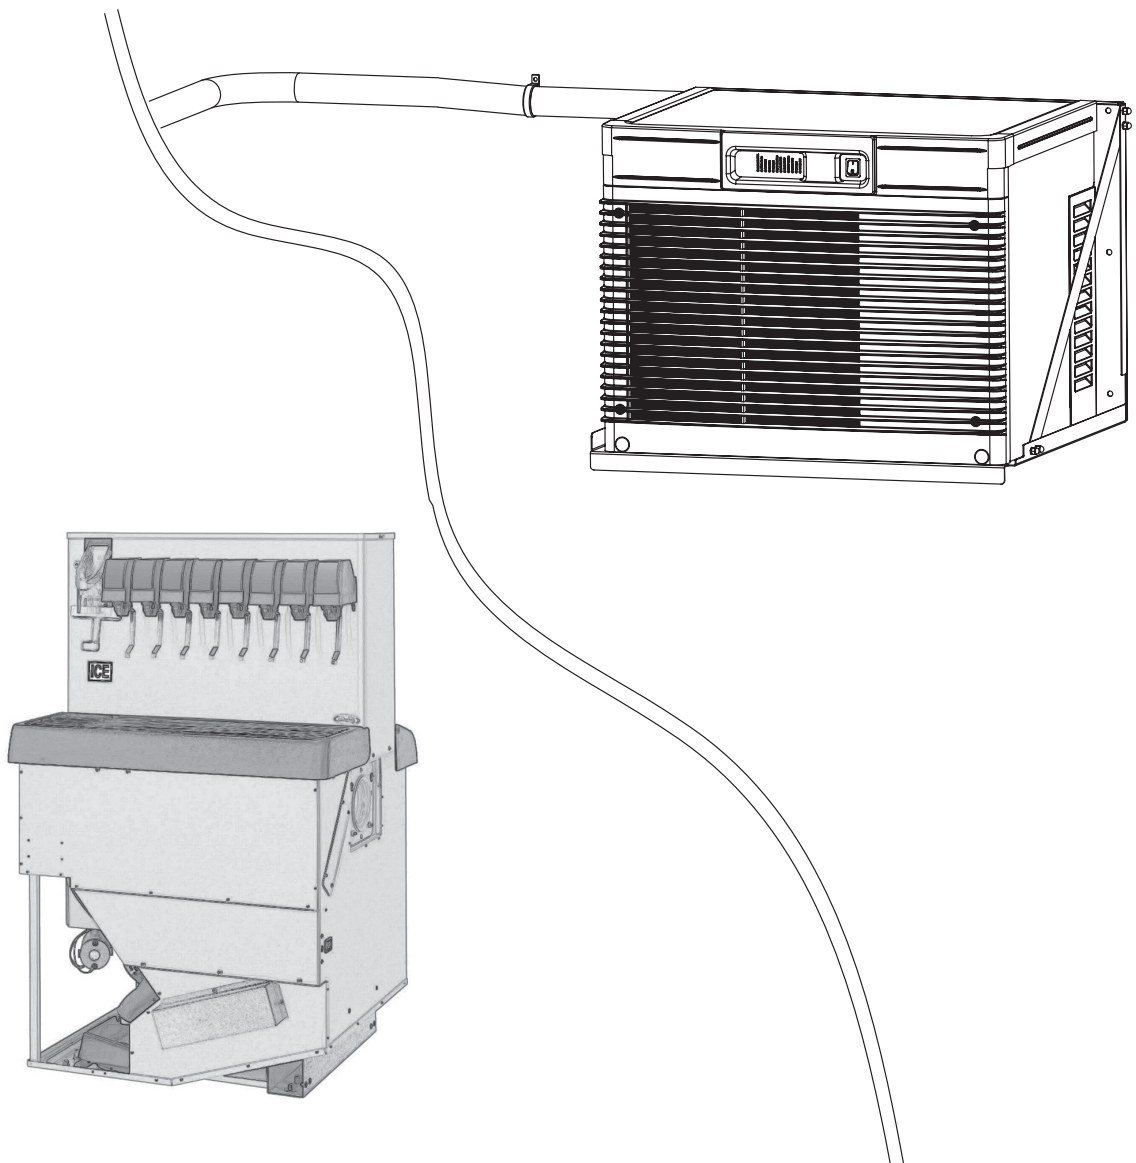


# Horizon Elite™ Ice Machine Models with RIDE™ Technology

## Installation Instructions for Cornelius PR150

HCC1010APS, HCC1410APS, HCC1010WPS, HCC1410WPS,  
(See model number configurator on page 2 for details.)









Order parts online  
[www.follettice.com](http://www.follettice.com)

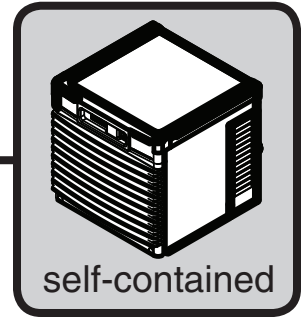

## Chewblet® Ice Machine Model Number Configurations

<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="border: 1px solid black; padding: 2px 5px;">HC</div> <div style="border: 1px solid black; padding: 2px 5px;">C</div> <div style="border: 1px solid black; padding: 2px 5px;">1400</div> <div style="border: 1px solid black; padding: 2px 5px;">A</div> <div style="border: 1px solid black; padding: 2px 5px;">V</div> <div style="border: 1px solid black; padding: 2px 5px;">S</div> </div>					
Icemaker	Voltage	Series	Condenser	Application	Configuration
MC Maestro™ Chewblet® (400 Series)	C 208-230/60/1 (icemaking head) <i>Self-contained only.</i>	400 up to 454 lbs (206kg)	A Air-cooled, self-contained	V Vision™	S RIDE™
HC Horizon Chewblet (1000, 1400, 1650 Series)	D 115/60/1 (icemaking head) <i>Self-contained and remote. If remote unit, high side is 208-230/60/1.</i>	1000/1010 up to 1036 lbs (471kg)	W Water-cooled, self-contained	H Harmony™	(RIDE remote ice delivery equipment)
HM Horizon Micro Chewblet	E 230/50/1 (icemaking head) <i>Self-contained only.</i>	1400/1410 up to 1450 lbs (658kg)	R Air-cooled, remote condensing unit	B Ice storage bin	
	F 115/60/1 (icemaking head) <i>Remote only. High side is 208-230/60/3.</i>	1650 up to 1580 lbs (717kg)	N Air-cooled, no condensing unit for connection to parallel rack system	J Drop-in	T Top-mount
				M Ice Manager diverter valve system	

## Read and complete the following 8 installation steps

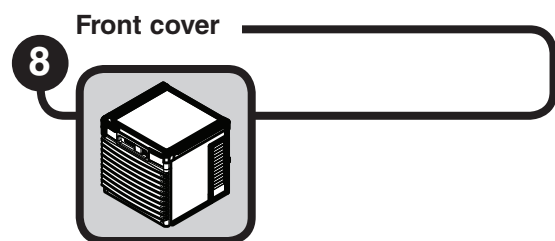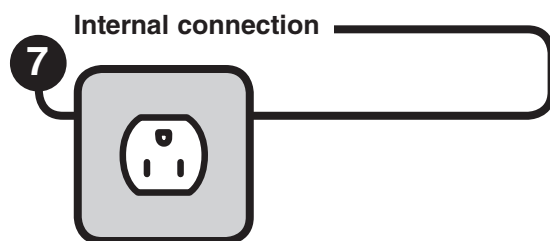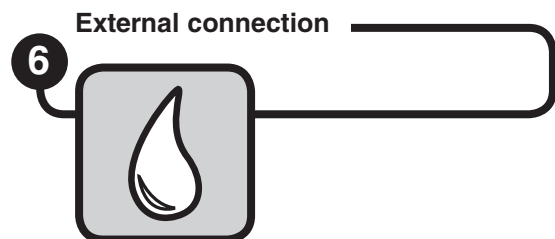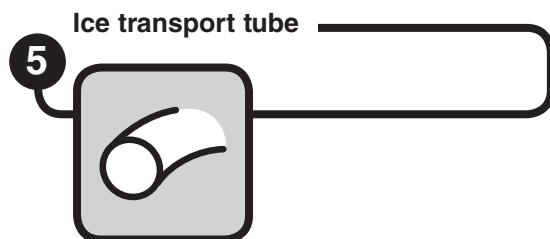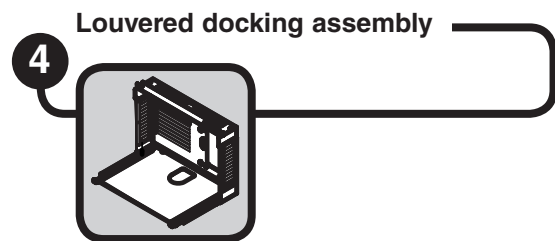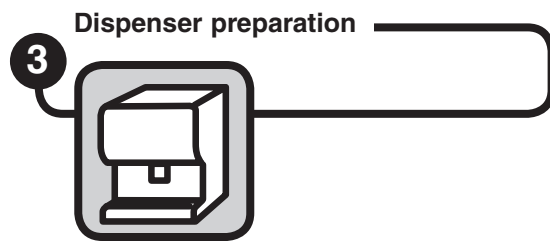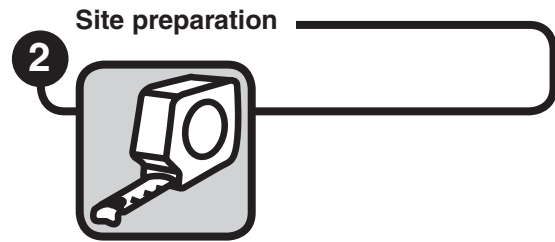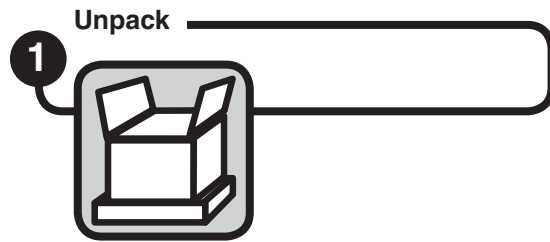


Carefully unpack and inspect the contents of your Follett ice machine.

Unpack

1



## 1.1 Unpack ice machine

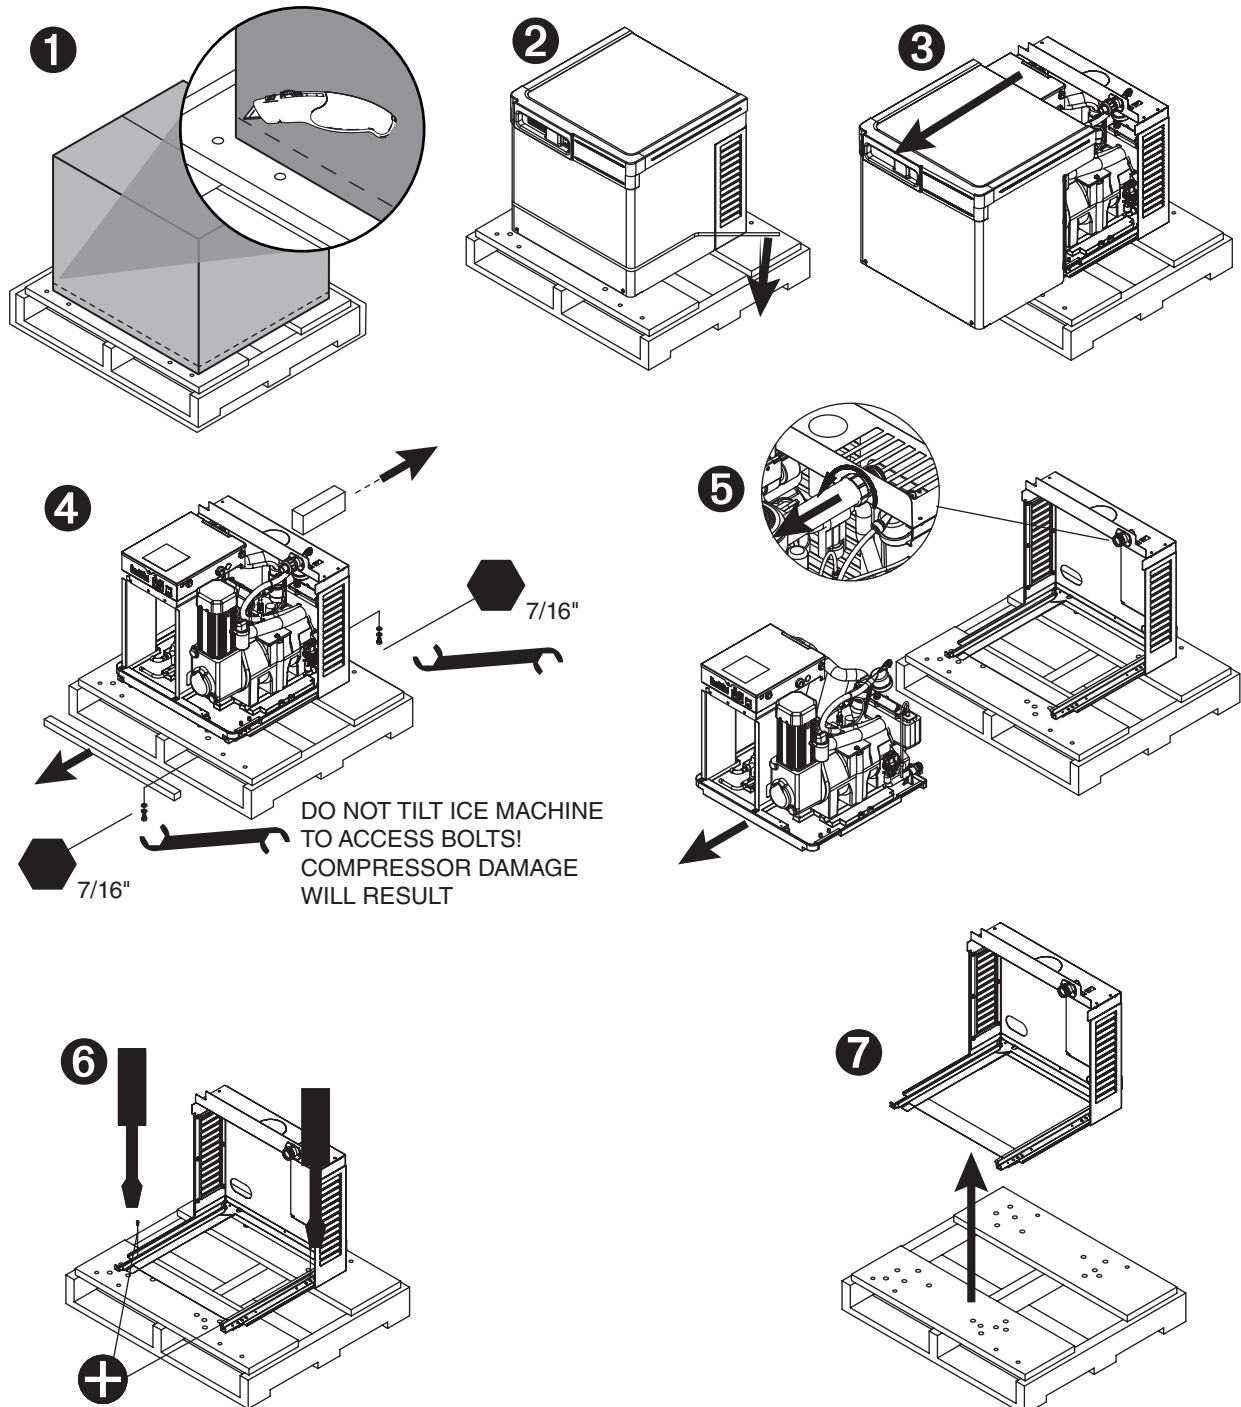


## Prepare the installation site.


## Site preparation

2

Provide drainage, water supply and electrical power to within 6 feet (2m) of ice machine in accordance with local and national codes. Outdoor installation is not recommended and will void warranty.

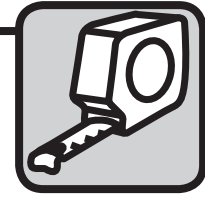

### 2.1 Installation site requirements

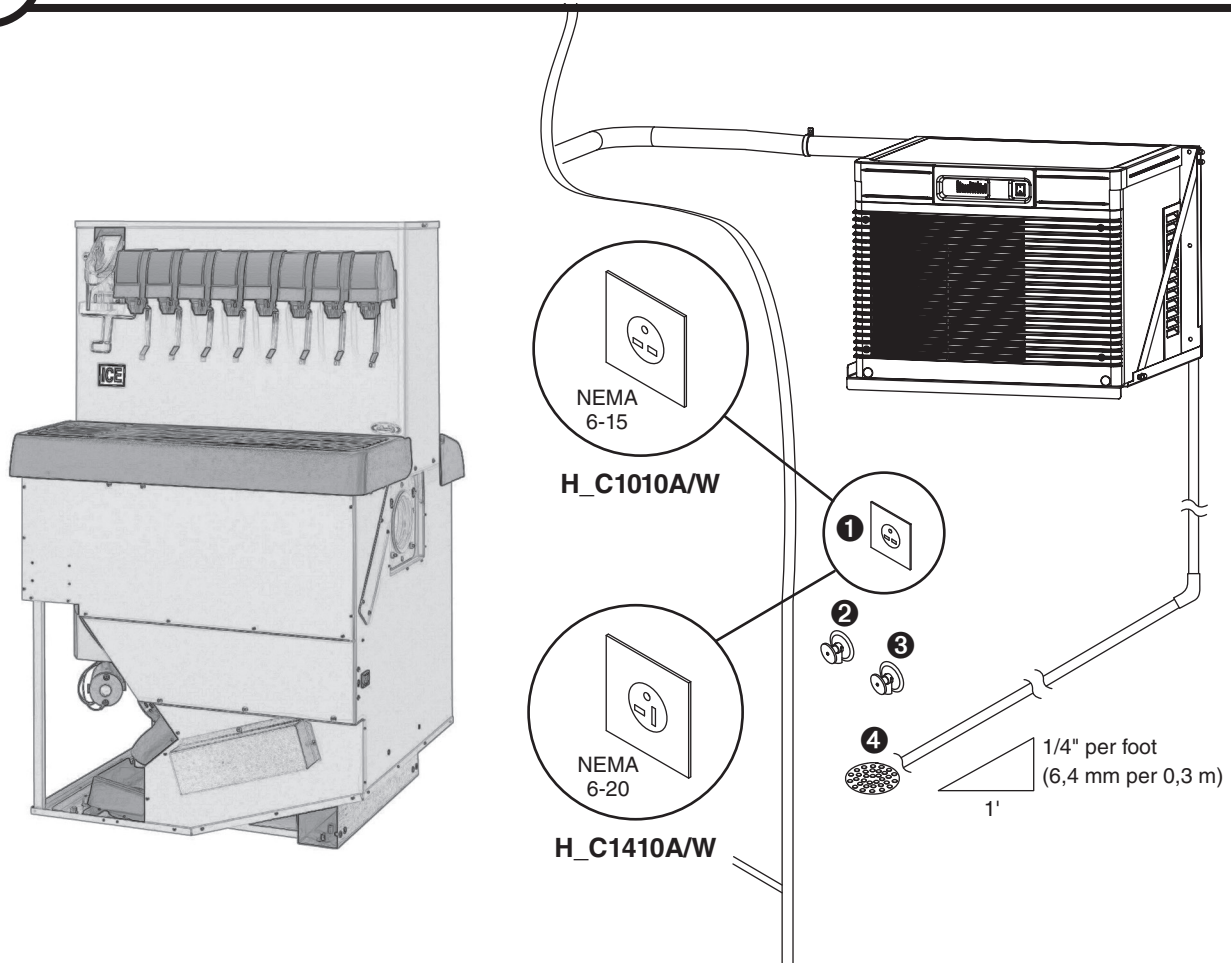

#### Electrical ①

- H\_C1010(A/W)JS 208-230/60/1-15 amps
- H\_C1410(A/W)JS 208-230/60/1-20 amps

#### Potable water supply ② (3/8" push-in internal connection, 3/8" OD tubing required)

- 10-70 psi (69-483kpa)
- 45 to 90 F (7 to 32 C)
- Follett recommends the use of an in-line water filtration system (item# 00130286)
- This equipment is to be installed with adequate backflow protection to comply with applicable federal, state, and local codes

#### Condenser water supply for water-cooled systems ③ (1/4" FPT inlet, 1/4" FPT outlet)


- 10 psi min.; 150 psi max. (69kpa min.; 1034kpa max.)
- 45 to 90 F (7 to 32 C)
- 1.5 gallons per minute (5.68 liters per minute)

#### Drain ④ (3/4" Barb)

- The drain line from the ice machine must have at least 1/4" per foot pitch (6,4mm/0,3m)




3.1

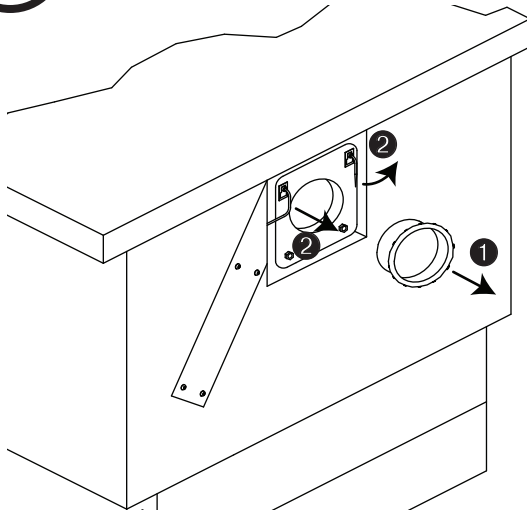


- Remove ice entry cover plate **1**
- Remove bin thermostat capillary tube from bracket **2**

3.2

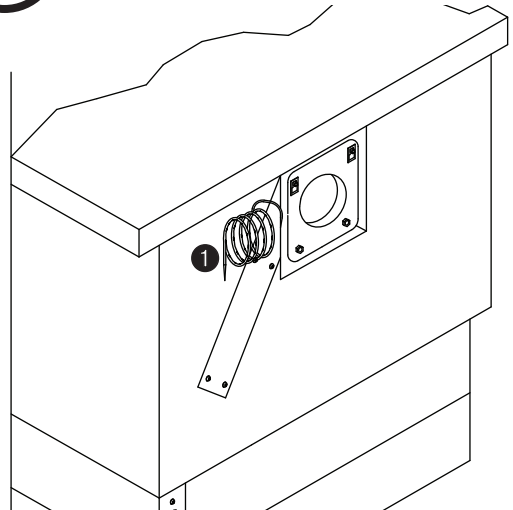


- Coil capillary tube and secure away from bin fill opening **1**

3.3

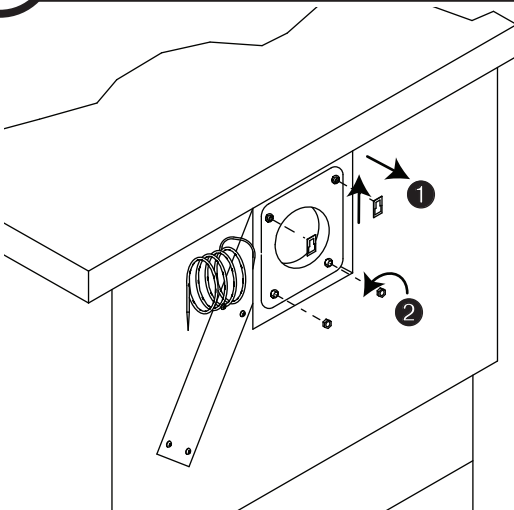


- Remove retaining clips **1** and deflector nuts **2**

3.4

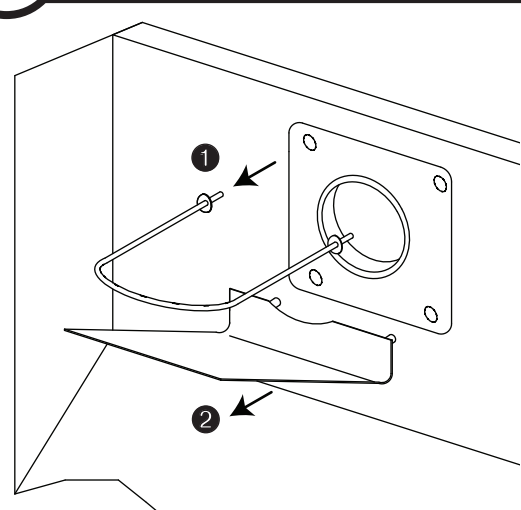


- Remove capillary tube bracket **1** and deflector **(Fig. 4.2)** from inside ice storage hopper **2**

### 3.5

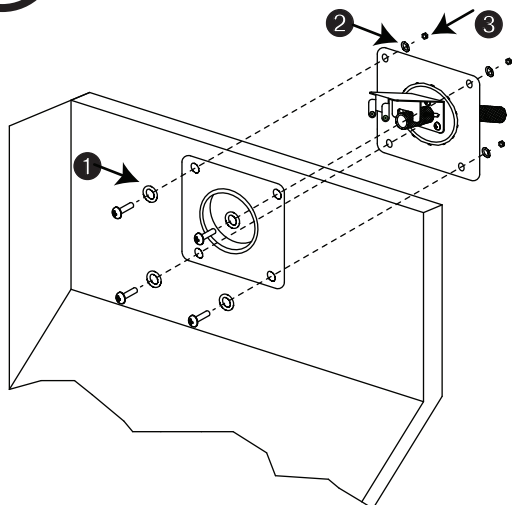


- Mount cover plate/transport tube assembly on outside of dispenser using screws, flat washers **1**, lock washers **2** and nuts provided **3**

### 3.6

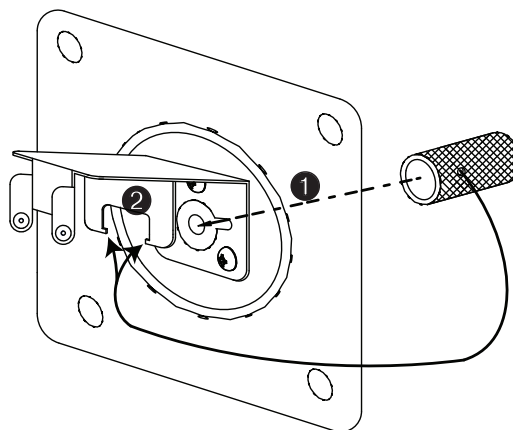

- Insert end of ice transport tube (with retaining holes) through hole in center of cover plate assembly **1**
- Secure ice transport tube (holes) to retaining tabs on bracket **2**


### 3.7

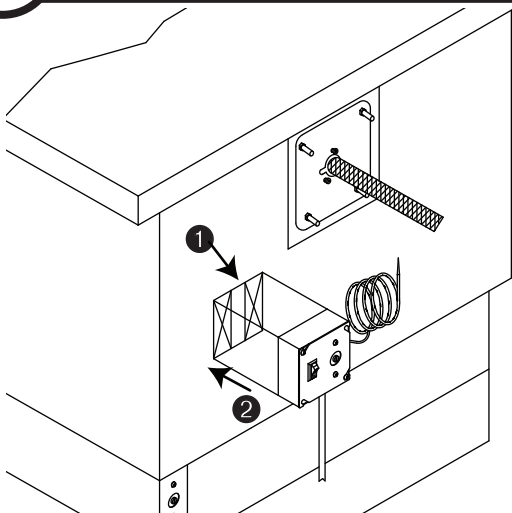

- Thoroughly clean outer wall of dispenser in area indicated **1**
- Peel backing from adhesive and mount bin thermostat box to dispenser wall **2**


**Note:** Once adhesive on thermostat box contacts dispenser cabinet it can not be re-positioned.

### 3.8

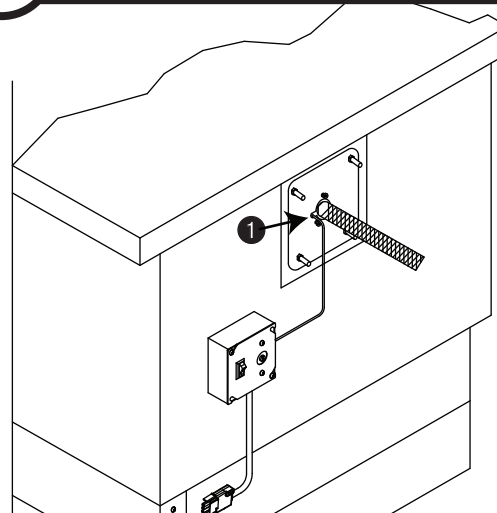


- Insert bin thermostat capillary tube through hole in gasket as indicated **1**

3.9

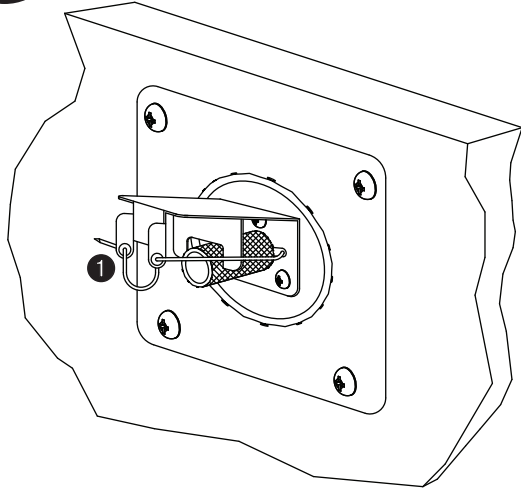

- Route thermostat capillary tube through mounting bracket grommets as shown ①


3.10

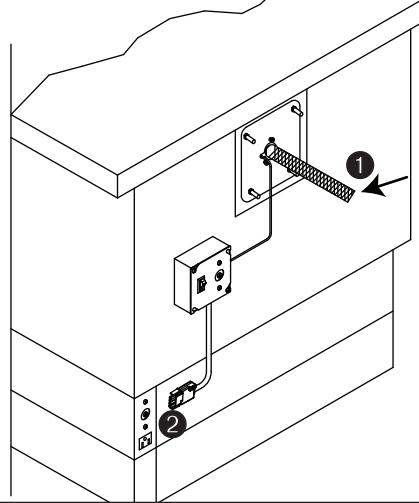

- Insulate entire length of ice transport tube ① and route to icemaker in accordance with directions in Horizon installation instructions
- Route bin signal wire to icemaker ②



## BEFORE PROCEEDING

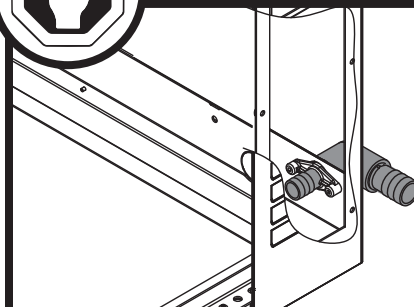

Prior to installing the louvered docking assembly, ensure that the drain fitting is oriented (right or left) correctly for your installation. An optional straight drain fitting is also supplied. You may need to remove the back panel of the docking assembly in order to re-orient or change the drain fitting. Replace back panel prior to mounting the docking assembly.




## Install the louvered docking assembly.




### WARNING

- Docking station must be secured in accordance with these instructions to ensure ice machine stability.
- Ventilation openings in the louvered docking station should be clear of obstruction

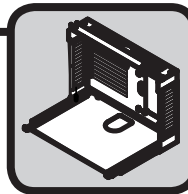


### Wall bracket accessory

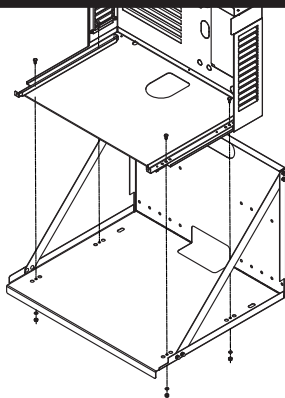

- Mount louvered docking assembly to wall bracket accessory

### Machine stand accessory

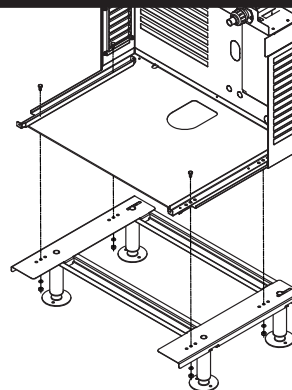

- Mount louvered docking assembly to machine stand accessory

## 4.1 Undercounter installation requirements Horizon 1010 & 1410 series

### DOCKING STATION: Horizon 1010 & 1410 water- and air-cooled models

(See detail drawing on page 9)

- Prior to installing the louvered docking assembly, ensure that the drain fitting is oriented (right or left) correctly for your installation. An optional straight drain fitting is also supplied. You may need to remove the back panel of the docking assembly in order to re-orient or change the drain fitting. Replace back panel prior to mounting the docking assembly.
- Position and screw louvered docking assembly to the bottom of counter inside of access panel/door 2" (51 mm) from the front edge of the cross brace ①
- The mounting surface for the louvered docking assembly must be solid. Do not mount directly onto runners or channels.
- There must be no lip or edge that would hinder the ice machine from sliding in or out of the louvered docking station ②


### INTAKE AND EXHAUST GRILLE PLACEMENT: Horizon 1010 & 1410 air-cooled models only

(See detail drawing on page 9)

- Position the intake grille cut out in the access panel/door  
**Note:** Ice machine must be aligned with cut out and inside of access panel to provide a tight seal and prevent recirculation of hot exhaust air.
- Left edge of cutout should be 2.25" (57 mm) from the left side of the ice machine ③
- Bottom edge of cutout should be 2" (51 mm) from the bottom of the ice machine ④
- Position supplied exhaust grille at least 18" (458mm) away from intake grille ⑤. Where possible, install exhaust grille to the rear or side of the base cabinet.
- If not using supplied grille, air circulation requirements below must be met:  
250 sq. in (1613 sq cm) intake air, 250 sq. in (1613 sq. cm) exhaust air

## Undercounter installation detail – Horizon 1010 & 1410 series

Front View

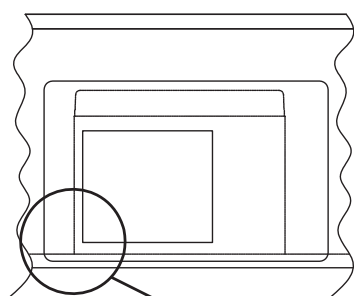

2"  
(51 mm)

2.25"  
(57 mm)


4

24" x 15" cutout (610 mm x 381 mm)

bottom of ice machine

side of ice machine

Top View

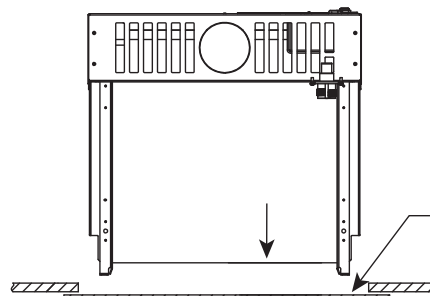

Access panel/  
door on counter

1


2" (51 mm)



### CAUTION


- Keep ventilation openings in the appliance enclosure clear of obstruction.
- To ensure proper ventilation (if not using supplied grille) carefully review air circulation specifications on facing page (4.1)

3D Counter View

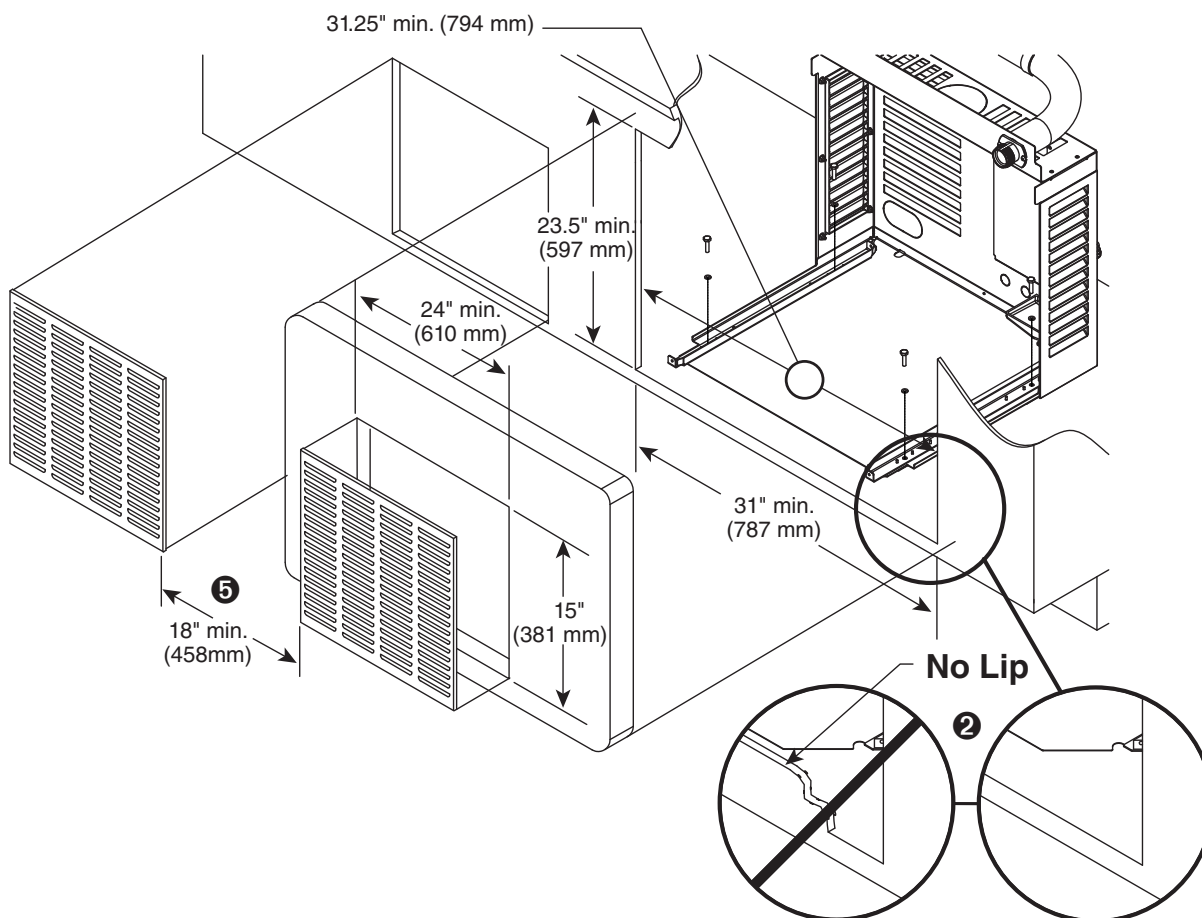



### 5.1 Ice transport tube installation.

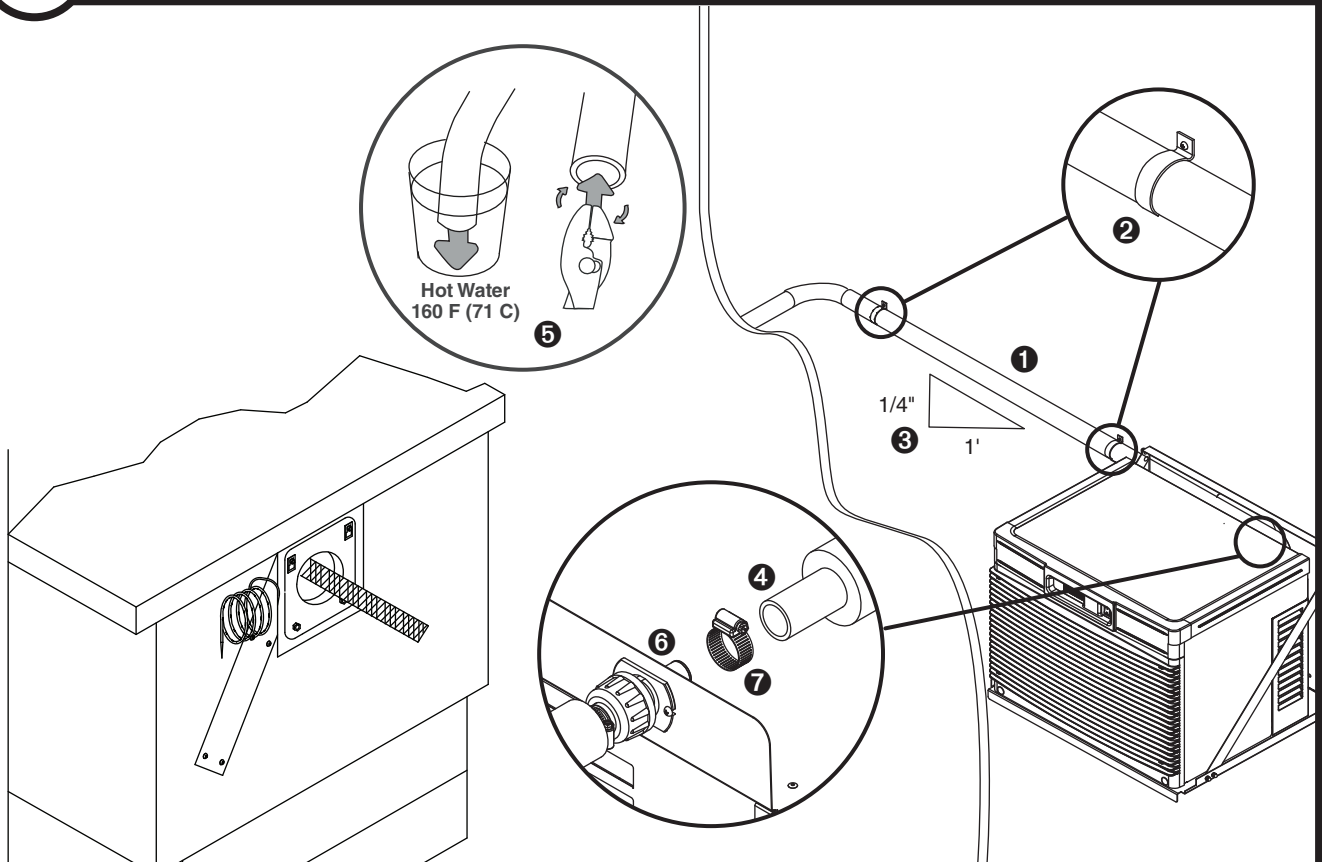

#### Ice transport tube tips


- Insulate entire length of ice transport tube ①
- Secure ice transport tube ② as needed to prevent dips and traps from forming. For long tube runs see guide on page 16.
- Pitch tube at least 1/4" per foot (6,4mm/.3m) ③
- Ice transport tube must drain towards ice machine

#### Ice transport tube to Ice machine

- Be sure tube ends are square ④
- Heat end of transport tube in cup of 160 F (71 C) hot water to soften and spread with pliers ⑤ before making connection to ease assembly
- Push ice transport tube onto ice machine nipple ⑥
- Install hose clamp ⑦




## 6.1 Bin Signal Installation

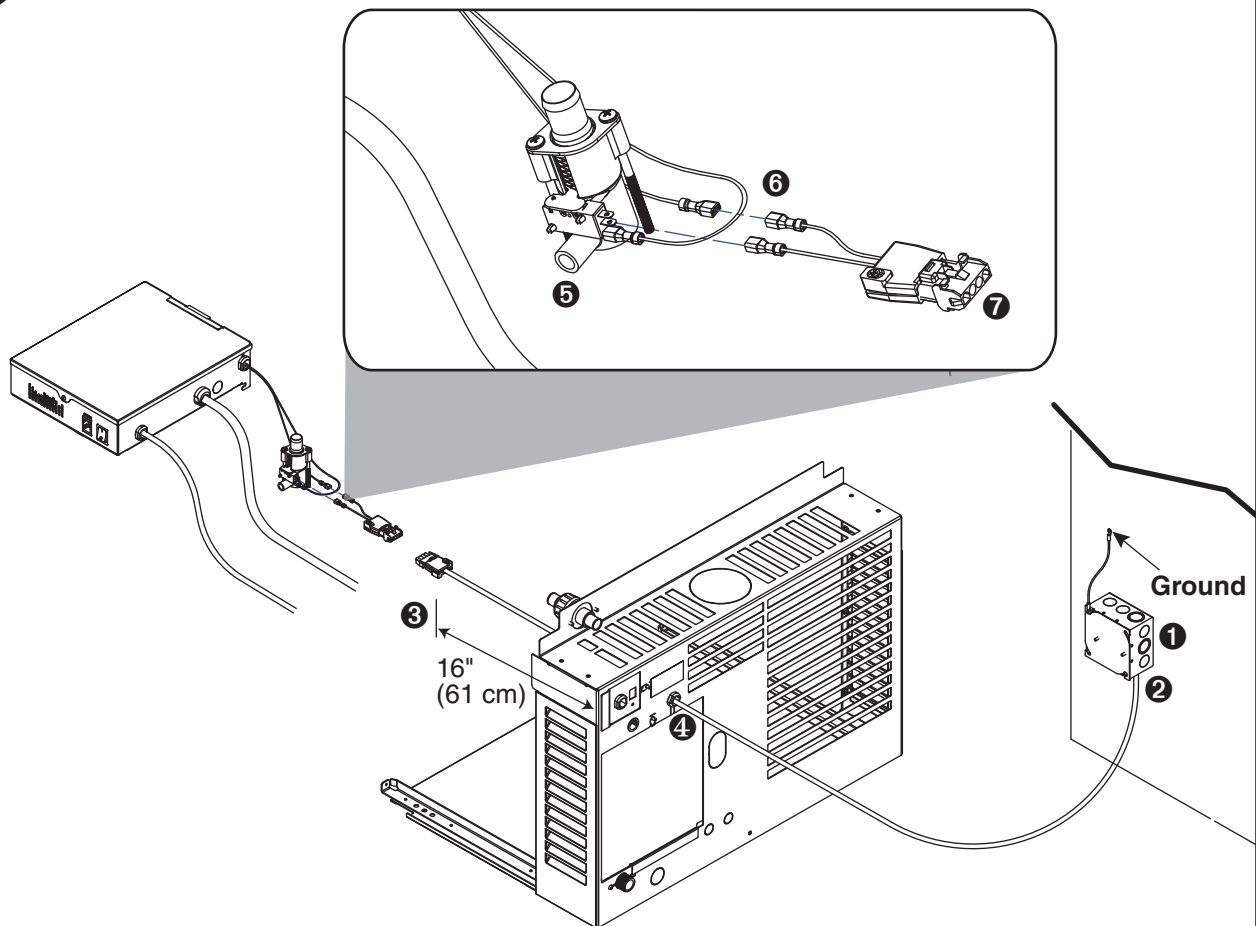


- Mount the electrical box to the side of the dispenser ① to establish a ground connection.  
**Note:** If a 4 x 4 box is mounted to a non-grounded surface, connect ground wire at an appropriate ground.
- Connect the bin signal cord to the plug on the electrical box. ②
- Insert 16" (61 cm) of the long bin signal cable ③ into the hole in the back of the louvered docking station ④ and secure in place with strain relief provided.
- After sliding the ice machine module into the louvered docking station, disconnect one wire from shuttle switch and replace with wire from adapter plug. ⑤
- Connect wire removed from shuttle switch to male connector on adapter plug wire. ⑥
- Complete normal installation procedure for the ice machine using the installation manual that shipped with the ice machine.
- Connect adapter plug into bin signal plug. ⑦

Connect utilities to louvered docking assembly.

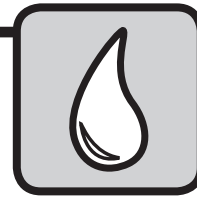

## 7.1 Air-cooled ice machines only

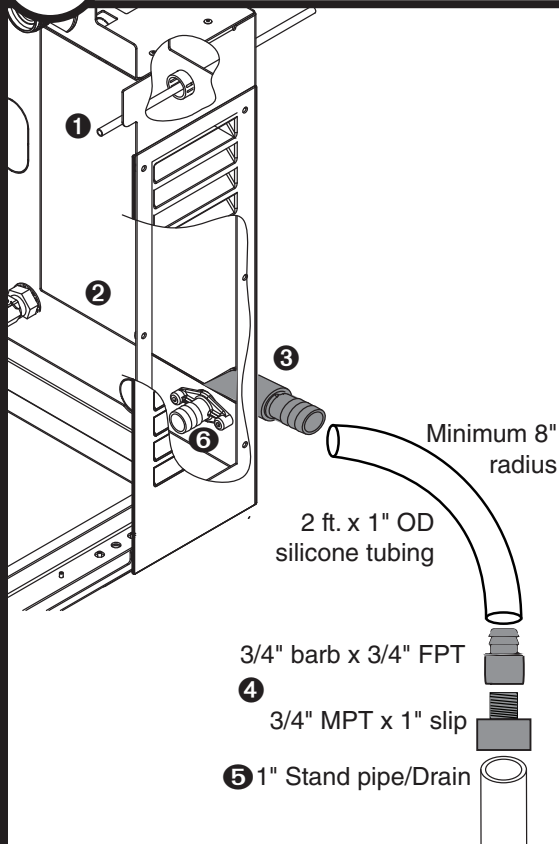


- Rough-in ice machine potable water supply ①.  
3/8" push-in connection will be made at shut-off valve inside machine
- Remove access panel if necessary ②.
- Connect the silicone tubing to the ice machine 3/4" drain barb ③.
- Assemble the 3/4" barb x 3/4" FPT to the 3/4" MPT x 1" slip. Connect the other end of the silicone tubing to the 3/4" barb ④.
- Connect the 1" slip fitting to the 1" stand pipe/drain ⑤.

**Note:** Minimum 8" radius on silicone drain line. Drain line from the ice machine must have at least 1/4" per foot pitch (6,4mm/0,3m).

- Apply Petrol-gel to barbed drain fitting ⑥
- Replace access panel.

## 7.2 Water-cooled ice machines only

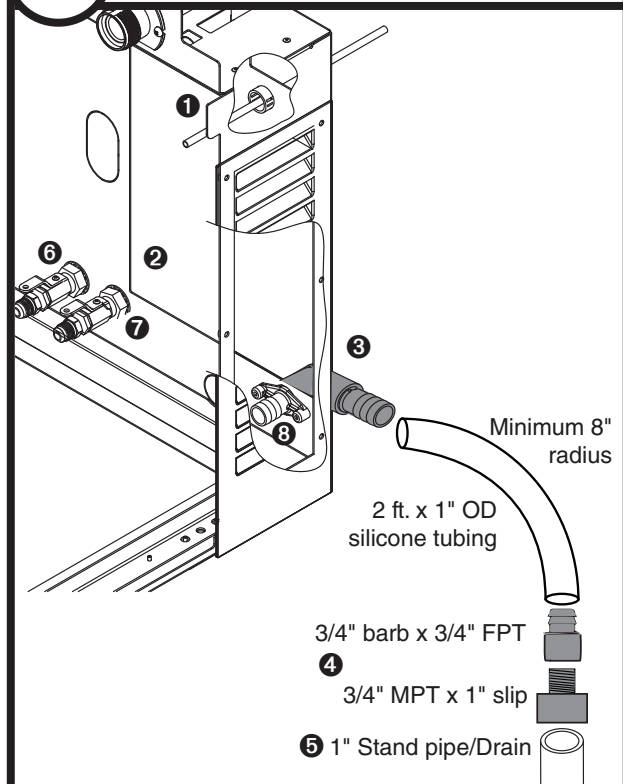

- Rough-in ice machine potable water supply ①.  
3/8" push-in connection will be made at shut-off valve inside machine
- Remove access panel if necessary ②.
- Connect the silicone tubing to the ice machine 3/4" drain barb ③.
- Assemble the 3/4" barb x 3/4" FPT to the 3/4" MPT x 1" slip. Connect the other end of the silicone tubing to the 3/4" barb ④.
- Connect the 1" slip fitting to the 1" stand pipe/drain ⑤.

**Note:** Minimum 8" radius on silicone drain line. Drain line from the ice machine must have at least 1/4" per foot pitch (6,4mm/0,3m).

- Connect cooling water supply ⑥ and return ⑦
- Apply Petrol-gel to barbed drain fitting ⑧
- Replace access panel.

Connect louvered docking assembly to ice machine.

## Internal connections **8**




### CAUTION

- Plug must be accessible after final installation.




Air-cooled ice machines – follow steps 8.1 through 8.5.

### 8.1 Ice transport tube

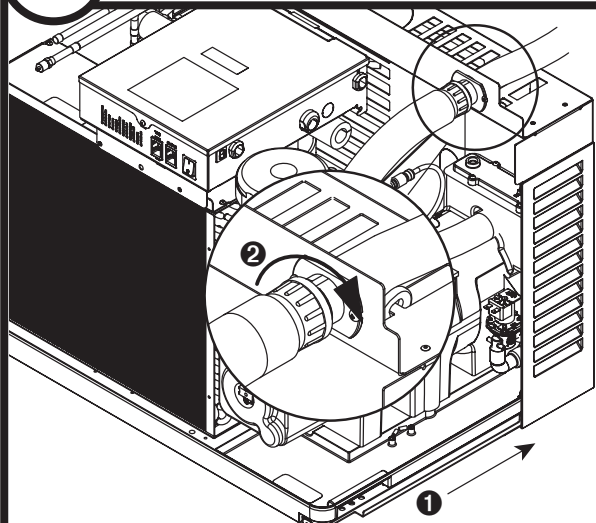


- Slide ice machine into louvered docking assembly *ensuring that drain tube is fully seated on barbed drain fitting* ①
- Insert ice transport tube all the way into coupling and tighten nut firmly ②

### 8.2 Potable water and drain lines

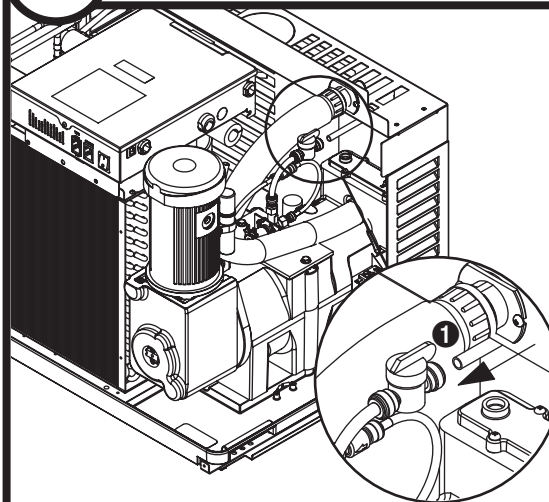


- Insert potable water line into valve ①

### 8.3 Power cord

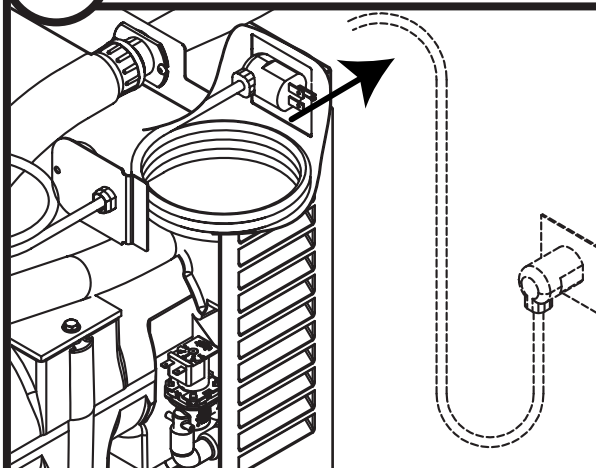

- Remove twist tie
- Carefully pass cord thru opening and plug into wall outlet

### 8.4 Power cord

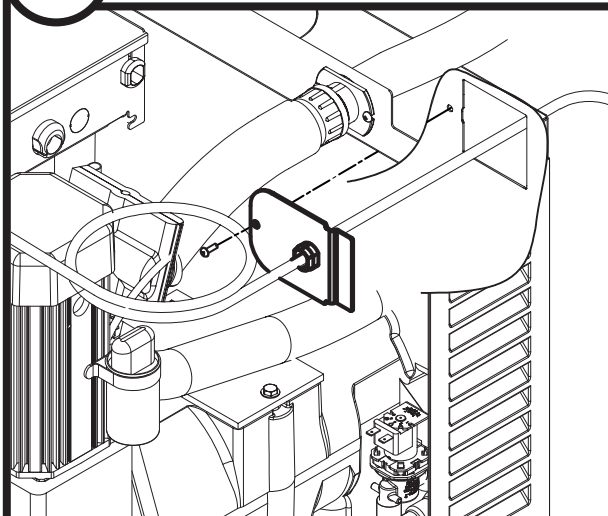


- Position plate into opening and secure with supplied screw




Water-cooled ice machines – follow steps 8.6 through 8.12.

### 8.5 TDS switch

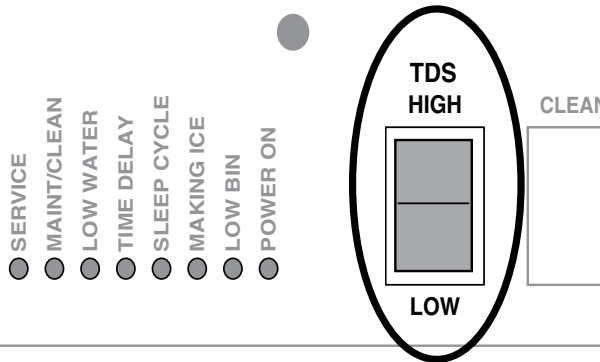


- Set the TDS switch on the electrical box:  
**HIGH:** for extended service life  
**LOW:** for low-scale water

### 8.6 Cooling lines

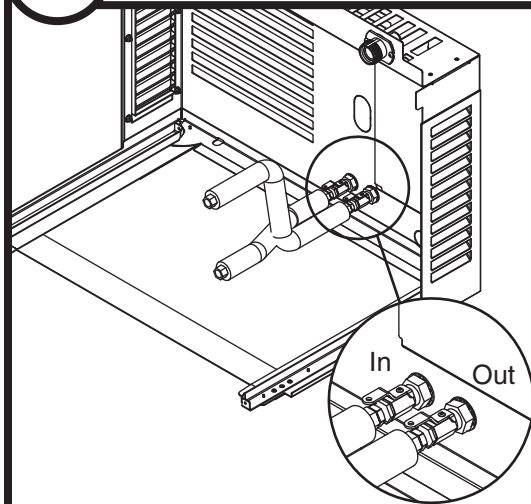


- Install ice machine cooling water lines to louvered docking assembly

### 8.7 Ice transport tube

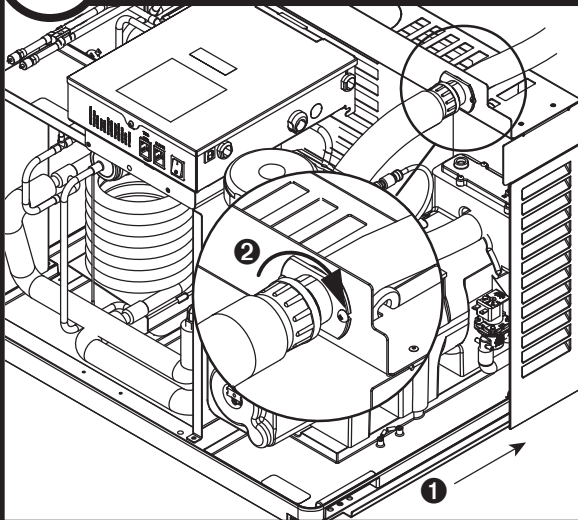


- Slide ice machine into louvered docking assembly *ensuring that drain tube is fully seated on barbed drain fitting 1*
- Insert ice transport tube into coupling and tighten nut firmly 2

### 8.8 Potable water and drain lines

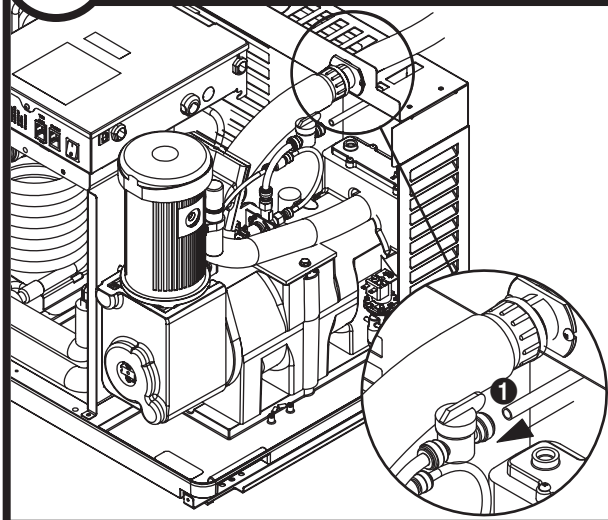


- Insert potable water line into valve 1

### 8.9 Cooling lines and power

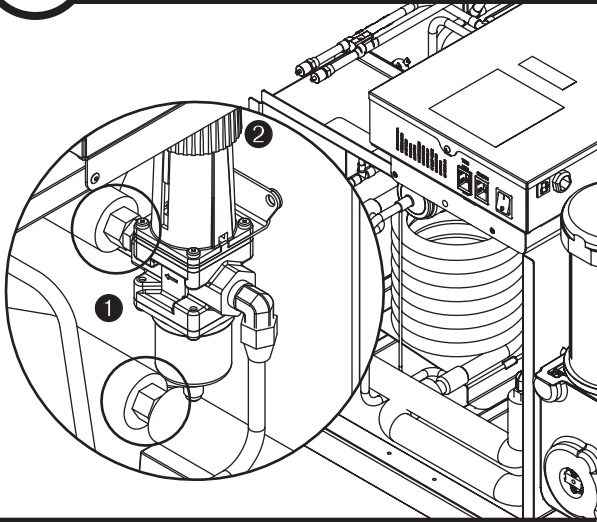


- Connect cooling water lines to ice machine (Water "Out" connects to water regulator.) ①
- Water valve is set at the factory. **DO NOT** remove seal or adjust water valve ②

### 8.10 Power cord

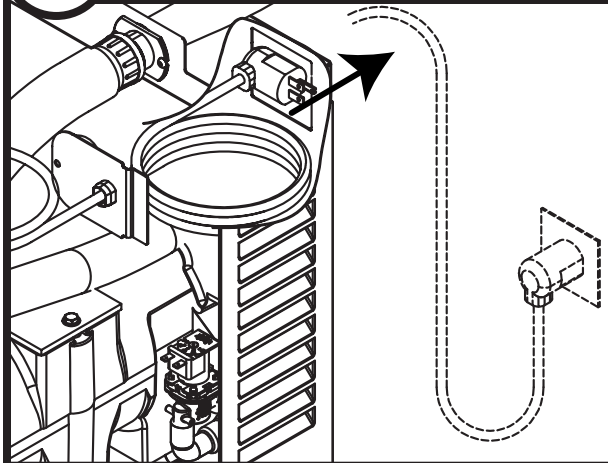


- Remove twist tie
- Carefully pass cord thru opening and plug into wall outlet

### 8.11 Power cord

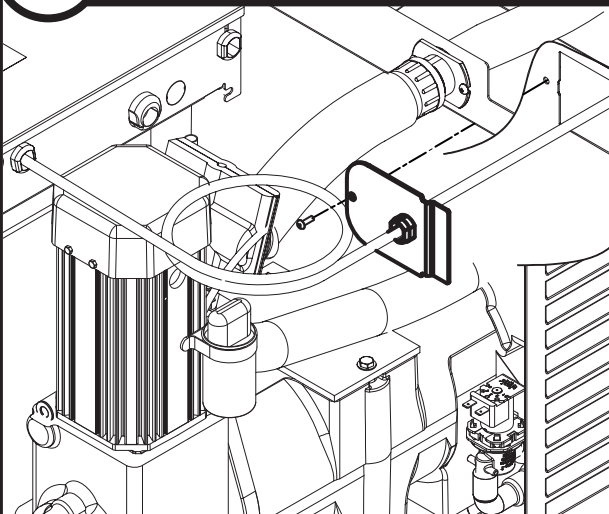

- Position plate into opening and secure with supplied screw

### 8.12 TDS switch

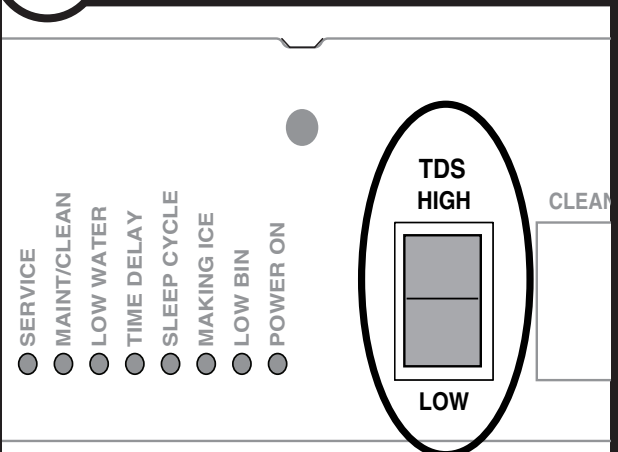


- Set the TDS switch on the electrical box:  
**HIGH:** for extended service life  
**LOW:** for low-scale water

### NOTICE


**Ice machine MUST be sanitized prior to operation!**

Consult Operation and Service Manual provided with ice machine for sanitizing instructions.



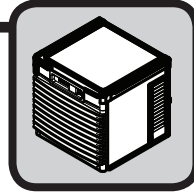

**Front cover installation –  
air-cooled undercounter only**

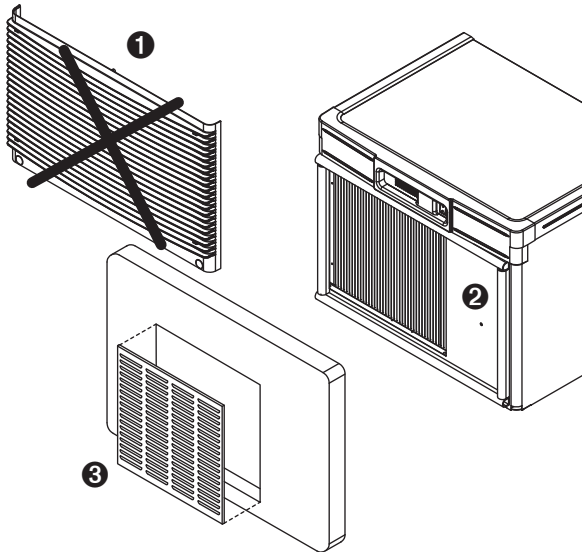


**CAUTION**

- Keep ventilation openings in the appliance enclosure clear of obstruction.
- To ensure proper ventilation (if not using supplied grille) carefully review air circulation specifications in section 4.1


- Remove and discard plastic grille ①
- Apply supplied gasket material around entire opening on skin to prevent air recirculation ②
- Attach supplied metal grille to opening in counter door (see section 4.1) ③

**Install front cover**

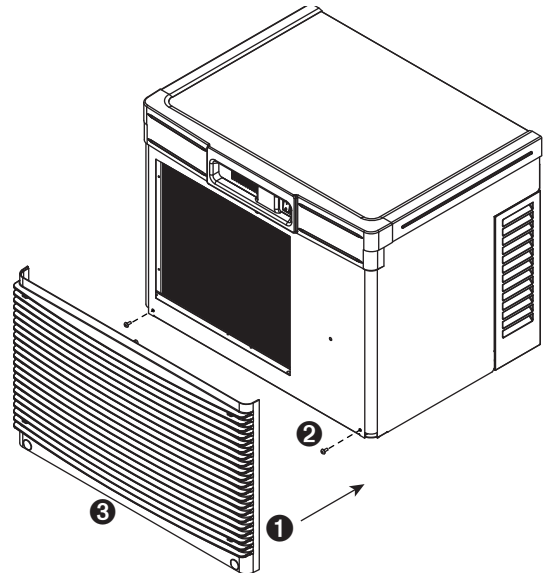

- Slide ice machine cover over machine ensuring that tabs on back of cover slip under louvers on back of louvered docking assembly ①
- Insert and tighten two screws through cover and into louvered docking assembly ②
- For air-cooled machines only, install plastic grill ③

## Long tube run recommendations

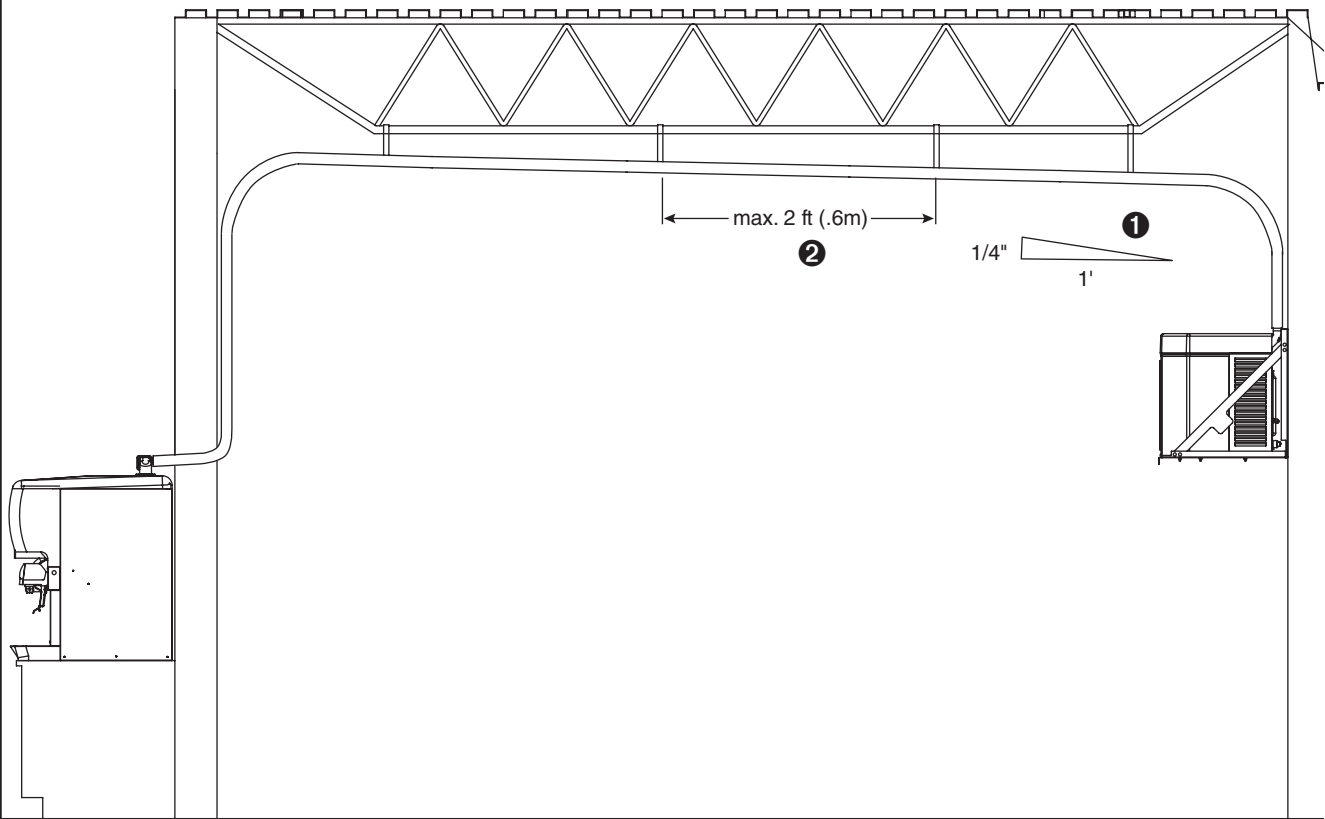

- Pitch ice transport tube to allow melt water to drain towards ice machine ①
- Secure insulated ice transport tube at least every 2 ft (.6m) to prevent dips or traps ②



